
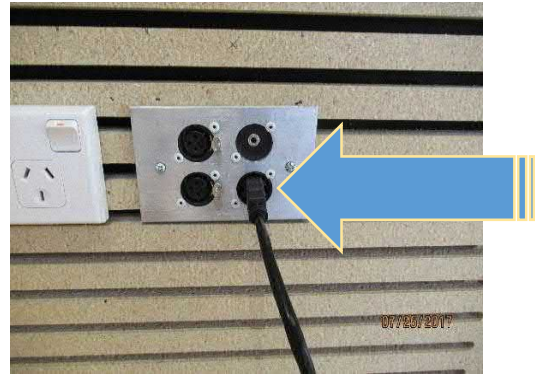


HDMI to Laptop Set-up Instructions

Turn your Laptop on before starting the connection process

Insert HDMI cable into your Laptop connection

Insert the HDMI Cable Into the Lower RH Wall Mounted Socket Plate

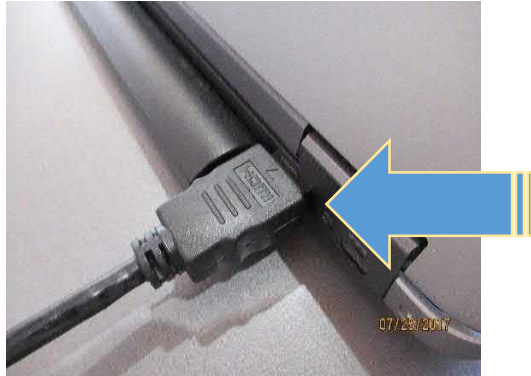


Locate a Wall Mounted Touchpad on the wall RH side of the Kitchen Servedy or LH side of the North Facing Fire Exit Door in the Hall



From the Top Tab Row, select "Video Settings"




Your Lap-top can be plugged into either HDMI-1 or HDMI-2 socket - Go to the QSC touchscreen and choose which screen you want to view your presentation on.

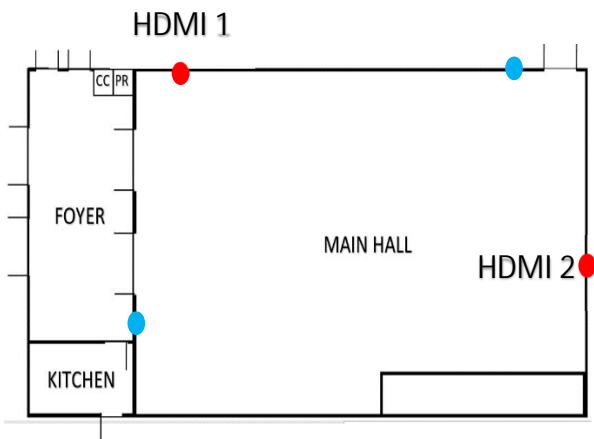

Select which wall monitor you want to use. (You can select one or two monitors if required) Then Select HDMI WALL 1 or 2. (The one your laptop is plugged into)

To Set Volume

On the Top Tab Row Select - "HDMI Audio" – adjust volume slides

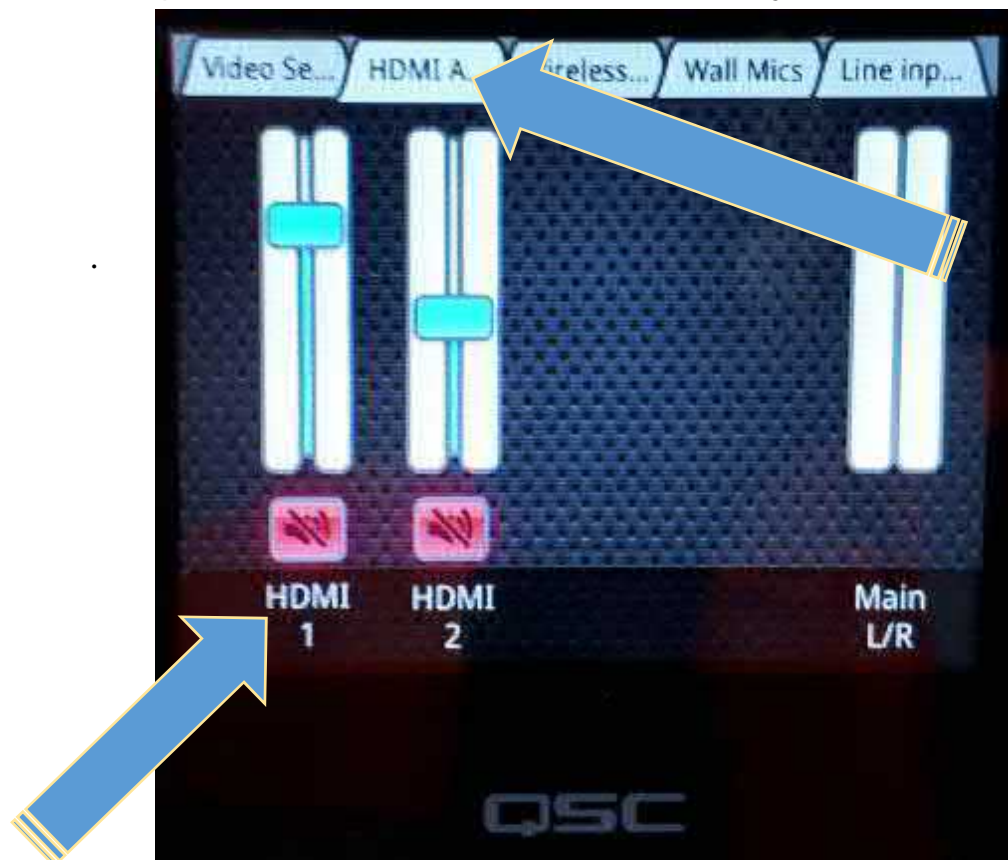

Note: To MUTE sound touch either button located under volume slides
Once you have finished, remove the cable from the wall and laptop
QSC Touchpad will shut down automatically

MP3 Player/ Cell phone Set-up Instructions

Turn your player or phone on before starting connection process


Insert 3.5mm Audio cable into your player or cell phone headphones socket
Insert 3.5mm Audio cable from your player into the 3.5mm Upper RH
Wall Mounted Socket Plate



Locate a Wall Mounted Touchpad on the wall RH side of the
Kitchen Servery or LH side of the North Facing Fire Exit Door in the Hall



From the Top Tab Row, select "Line Input" and then adjust volume using volume slides

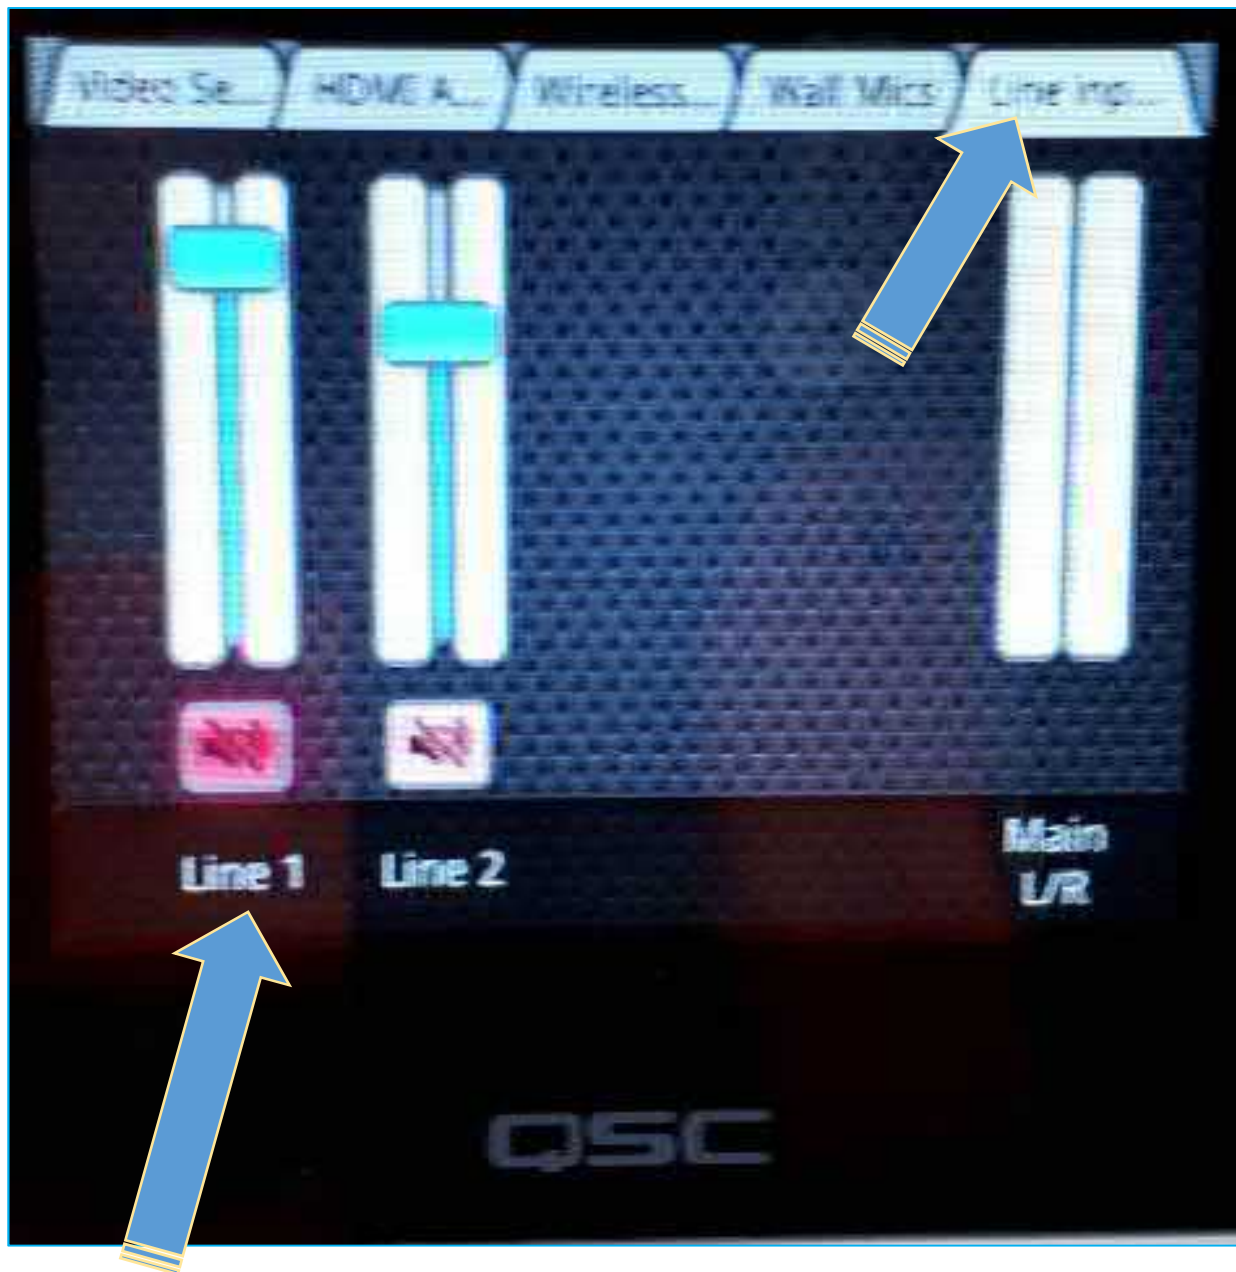


Note: To MUTE sound touch either button located under volume slides


Once you have finished, remove the cable from both sources the QSC Touchpad will shut down automatically

AUDIO VISUAL EQUIPMENT TERMS

QSC WALL MOUNTED TOUCHPAD

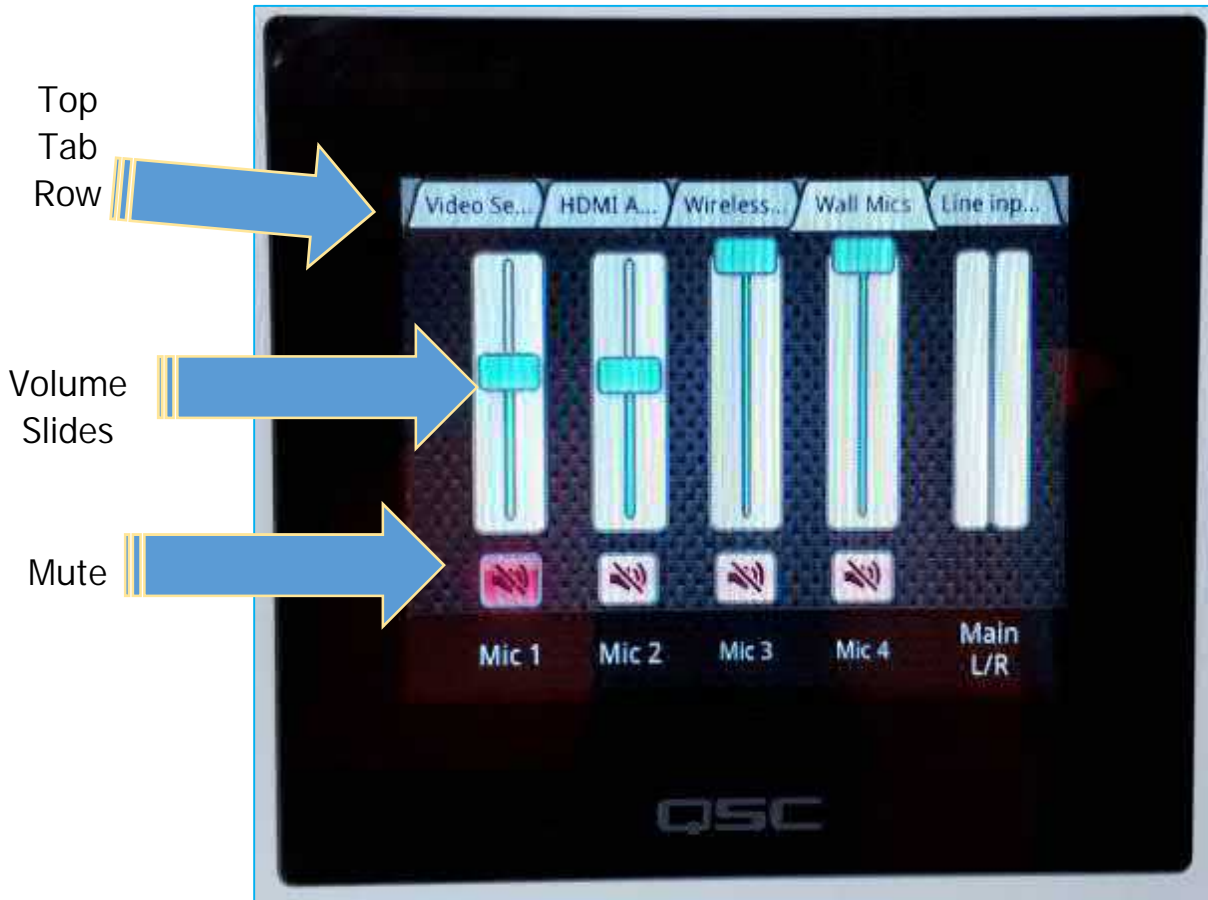

Wall Mounted Socket Plate

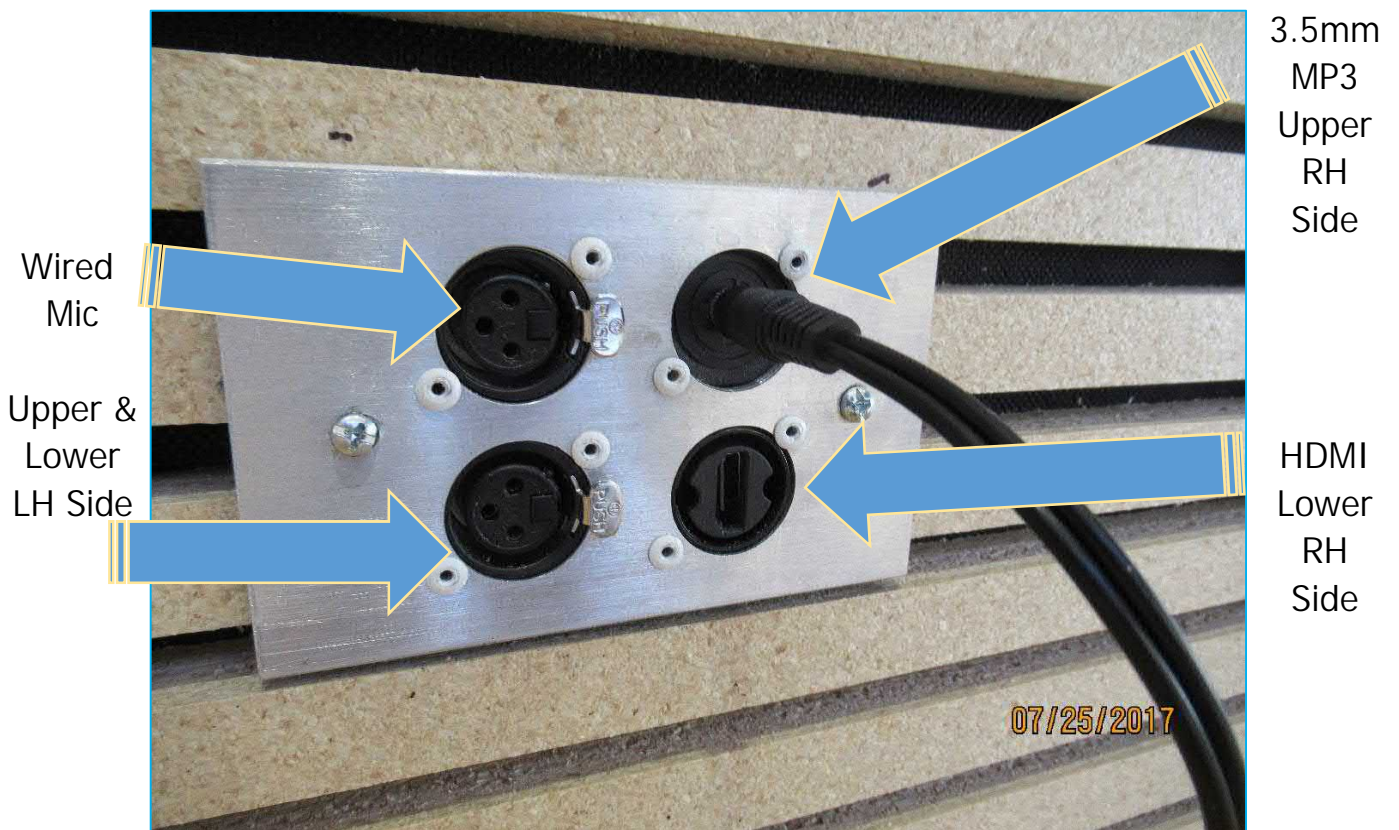

Wireless Microphone Set-up Instructions


Locate Red button at the bottom of the microphone
Push down the button until LCD Display lights up



Locate a Wall Mounted Touchpad on the wall RH side of the
Kitchen Servery or LH side of the North Facing Fire Exit Door in the Hall



From the Top Tab Row, select "Wireless" and then adjust volume using volume slides

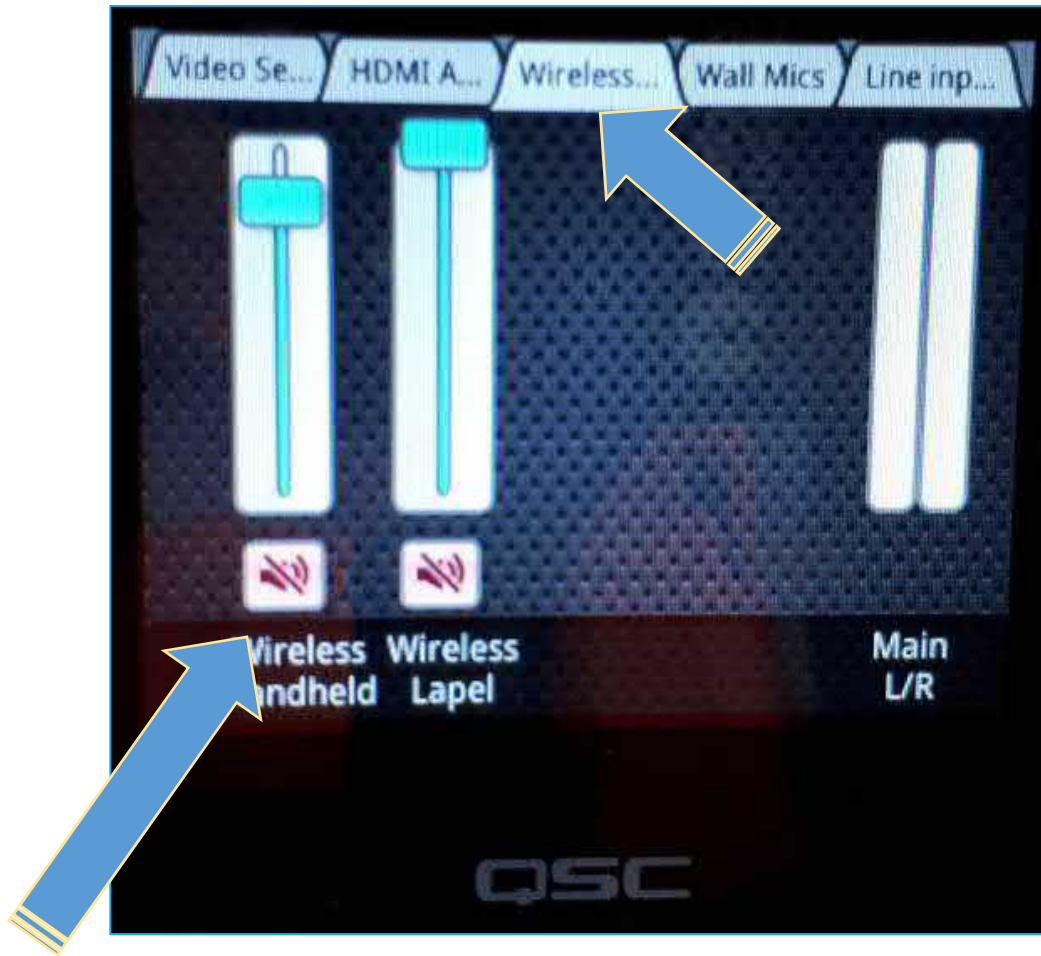

Note: To MUTE the sound touch either button located under volume slides

Once you've finished using the Microphone turn it OFF as this saves the batteries

Wireless Headset/ Lapel Set-up Instructions

Locate On/Off button at the bottom of the unit


Push down the button until LCD Display lights up, shut front cover



Locate a Wall Mounted Touchpad on the wall RH side of the Kitchen Servedy or LH side of the North Facing Fire Exit Door in the Hall



From the Top Tab Row, select "Wireless" and then adjust volume using volume slides

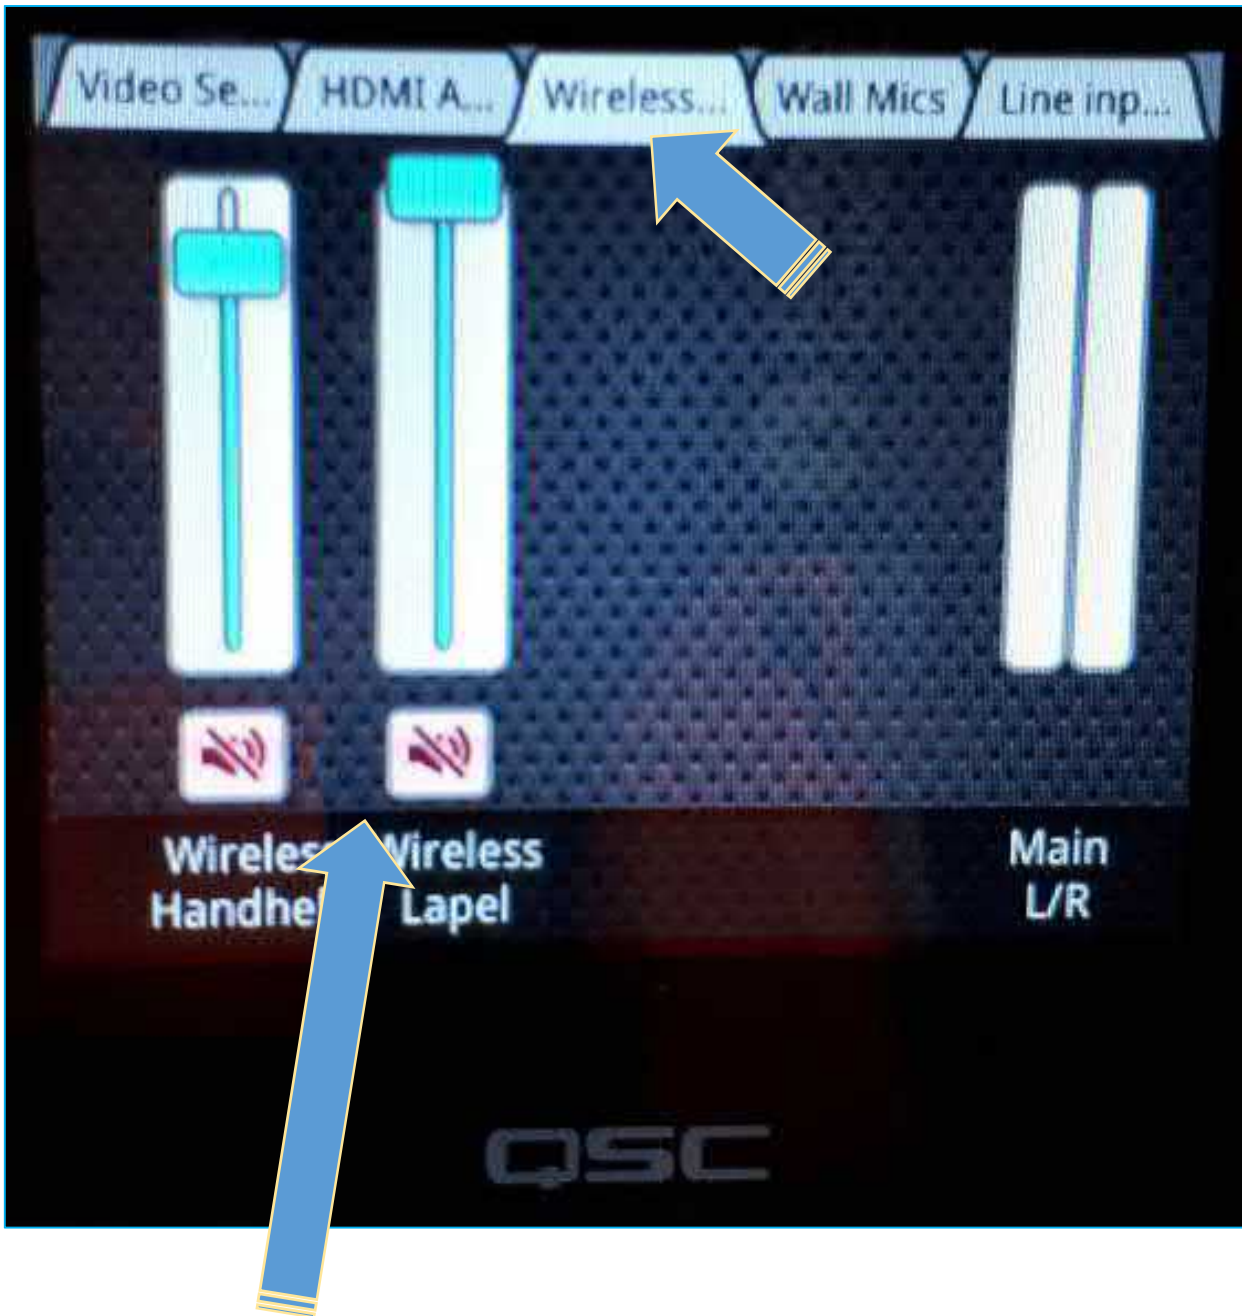

Note: To MUTE sound touch either button located under volume slides

Once you have finished using the Microphone turn it OFF as this saves the batteries for future use